



## Power Terminal Block

(Catalog Number 2711-TBDC, 2711P-RVAC)

This document provides instructions on how to remove and install the DC or AC Power Terminal Block in the following devices:

Cat. No.	Power Type	Terminal Type
2711-TBDC	DC	PanelView 300 Micro PanelView 600 Touch only PanelView Plus 400-600
2711P-RVAC	AC	PanelView Plus 400-600

### Removing and Installing the Power Terminal Block

You can remove and re-install the power terminal block for ease of installation, wiring and maintenance. A terminal block is pre-installed on each device when shipped.

#### WARNING



#### Explosion Hazard

- Substitution of components may impair suitability for hazardous locations.
- Do not disconnect equipment unless power has been switched off and area is known to be non-hazardous.
- Do not connect or disconnect components unless power has been switched off.
- All wiring must comply with N.E.C. articles 501-4(b), 502-4(b), 503-3(b) as appropriate.
- Peripheral equipment must be suitable for the location it is used in.

#### ATTENTION



AC and DC terminal blocks are keyed and marked differently so be sure to follow the markings. Do not force terminal blocks into connectors to prevent potential damage to terminal.

The procedure for removing and installing the power terminal block is similar for all terminals. Orientation of the power terminal block may vary between the terminals.

## To remove and install power terminal block:

### ATTENTION




Disconnect all power before removing or installing components. Failure to disconnect power may result in electrical shock and/or damage to the terminal.

### PanelView 300 Micro & 600 Touch Only


#### To remove terminal block:

1. Insert tip of small, flat-blade, screw driver into terminal block access slot.
2. Gently pry terminal block away from terminal to release locking mechanism

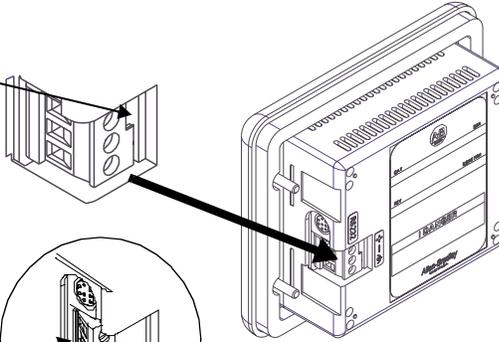

#### To install terminal block:

1. Press terminal block base in first with block leaning outward.
2. Gently push top of terminal block back to vertical position to snap in locking tab.

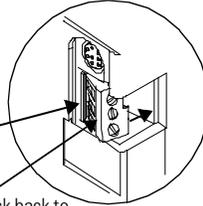


The location of the power terminal block on the PV600 Touch terminal is different but the procedure for removing and installing the terminal block is the same.

### PanelView Plus 400 - 600 Terminals


#### To remove terminal block:

1. Insert tip of small, flat-blade, screw driver into terminal block access slot.
2. Gently pry terminal block away from terminal to release locking mechanism

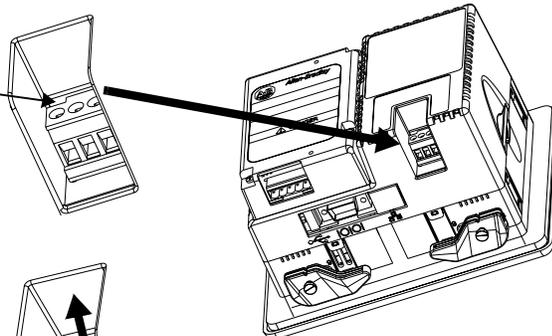

#### To install terminal block:

1. Press terminal block base in first with block leaning outward.
2. Gently push top of terminal block back to vertical position to snap in locking tab.

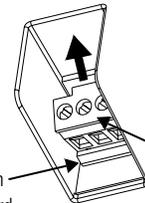

[www.rockwellautomation.com](http://www.rockwellautomation.com)

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846