 
 
 
 
 
 


Power Mod and Uni-PAK

Multifamily Metering Accessories and Replacement Parts

Accessory	Catalog number	Description
	ECMFCC	Bottom pull cover. Blank cover below the socket positions. For (W)MM Power Mod and WP, WEP, and WPC Uni-PAK.
	ECMFPS	Quick phase "Z" strap replacement for Power Mod type (W)MM meter stacks and series WP, WEP, and WPC Uni-PAK.
	ECWMLPS	Phase Straps for Lever bypass stacks. For use on 3-PH-In/1-PH-out, 125A, (W)ML stacks only. Only applicable to field phaseable units. Includes (2) line straps, (2) phase straps and (6) 1/4-20 hex nuts.
	ECMMFSP400	400A Power Mod metering switch main fuse bus replacement kit. Includes: bus plates, screws, hex nuts, washers and bolts (used to mount fuse in the module).
	ECMMFSP600	600A Power Mod metering switch main fuse bus replacement kit. Includes: bus plates, screws, hex nuts, washers and bolts (used to mount fuse in the module).
	ECMMFSP800	800A Power Mod metering switch main fuse bus replacement kit. Includes: bus plates, screws, hex nuts, washers and bolts (used to mount fuse in the module).
	ECMMGBE	Power Mod ground lug bar assembly kit for WT (feed thru) tap boxes. Adds 4 rows of NEMA stud kits to the ground bar. Can be used in bottom or top position. Includes 1 extension assembly and screws.
	ECAFL	(10) Arc flash labels.
	ECMMQRSCR	Power Mod QR and QJ 3-phase breaker mounting and strap screws. Kit contains (2) #10-32 x 2-7/16" screws and (3) 1/4-20 x 5/8" screws. For use on (W)ML and WMT Power Mod.
	ECGLK3300	300 kcmil ground lug extension kit. Includes (3) lugs for ground. May be used on WB (up to 1200A), WBT, WTB and WT_PU (1600-2400A).
	ECGLK6300	300 kcmil ground lug extension kit. Includes (6) lugs for ground. May be used on WB (up to 1200A), WBT, WTB, WET and WT_PU (400-2400A). Included bonding strap is only necessary for the WB series.
	ECMFMC10	Ring-type meter cover for 10" opening. For (W)MN stacks only.
	ECWML10	Replacement 10" ringless meter socket cover for use on 125A (W)ML, (W)MLZ and (W)MLZF stacks that are single-phase out only.
	ECWMLC	Bottom pull cover. Replacement part only. Only to be used on 125A (W)ML.
	ECWMLZEP	Secondary cross bus side cover plate. Replacement part only. For use on fusible meter stacks (W)MLZ(F).
	ECWMLZBP	Bottom removable endwall plate for (W)MLZ(F) stacks. Replacement part only.
	ECWMLZFBUS	Secondary cross bus assembly for (W)MLZ(F) stacks. These 3 bus bars are installed toward the base of the (W)MLZ stack to create a secondary bus connection to an adjacent (W)MLZF or (W)MLZ stack. Includes (3) bus bars and (6) hex nuts. Replacement part only.